


V-TWIN TREMOLO ARM INSTALLATION INSTRUCTIONS

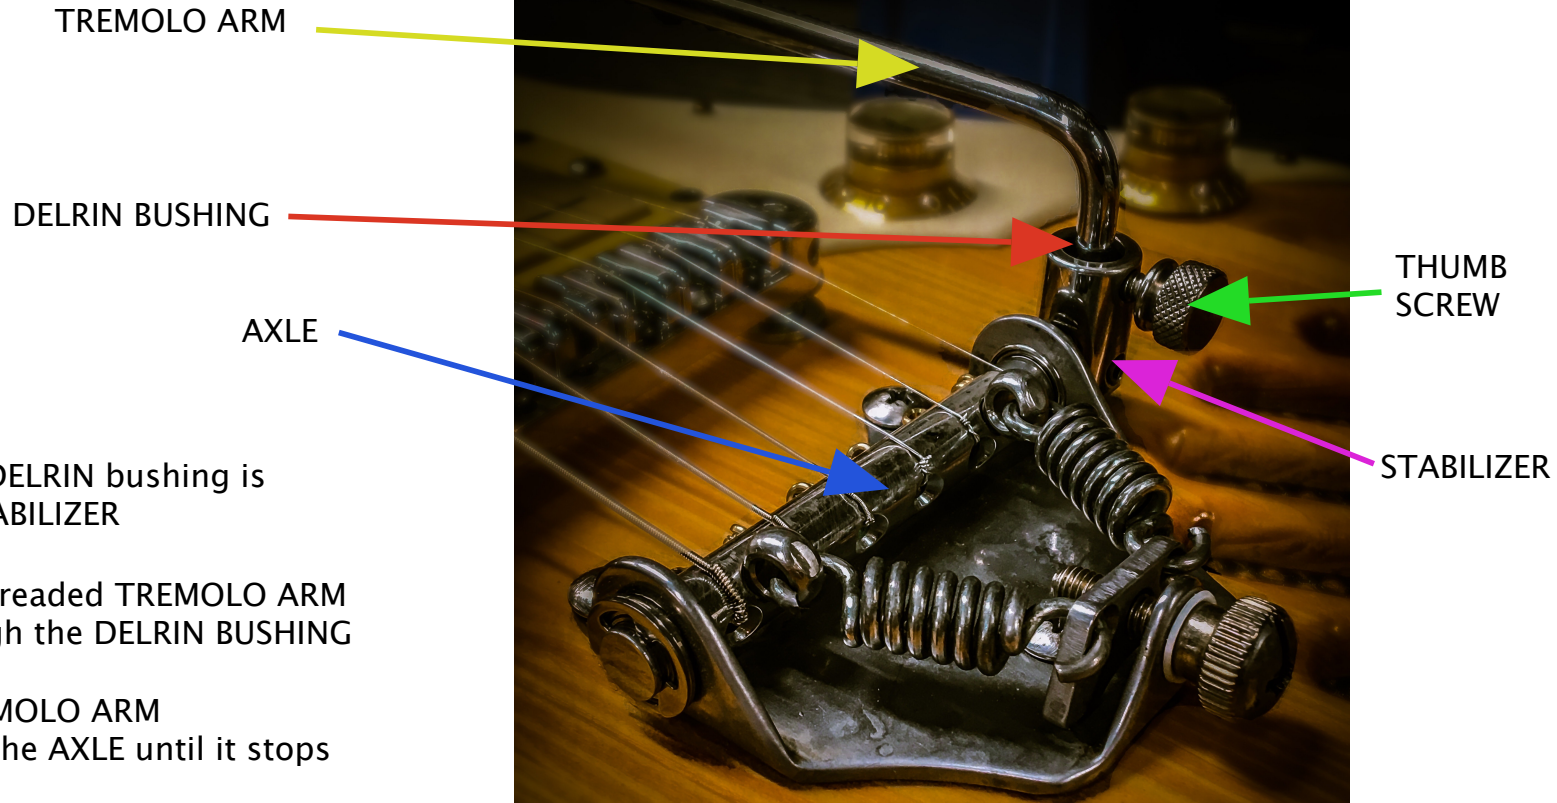

1. Make sure the DELRIN bushing is inserted in the STABILIZER
2. Push the M5 threaded TREMOLO ARM all the way through the DELRIN BUSHING
3. Screw the TREMOLO ARM CLOCKWISE into the AXLE until it stops
4. Turn the TREMOLO ARM back counter-clockwise up to one full turn
5. Tighten the THUMBSCREW if necessary to adjust arm tension
6. ROCK!

Easy Rider™
V-TWIN
PRECISION BALL BEARING TREMOLO